



## How to: Pass the internal MAC address to LTM through a Lenovo USB C docking station

**NOTE:** thin client device must be running UEFI BIOS Version R1YET35W(1.12)


01. Power on Lenovo device
02. Hit F12 at Lenovo splash screen logo to enter BIOS
03. Click "App Menu"
04. Click "Setup"

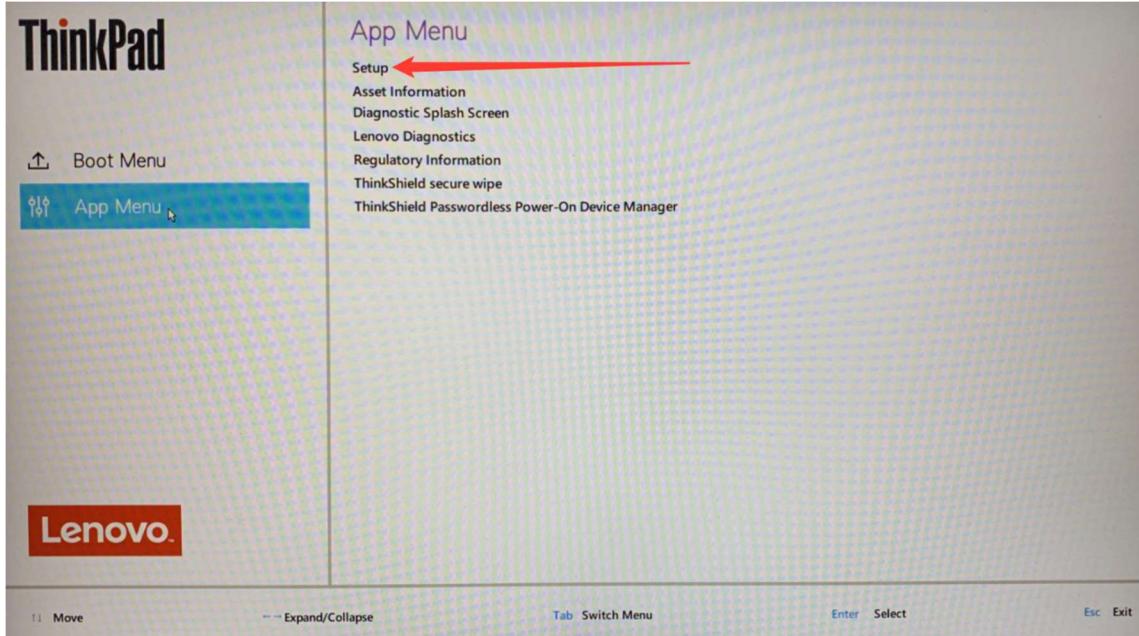

05. Click "Config"

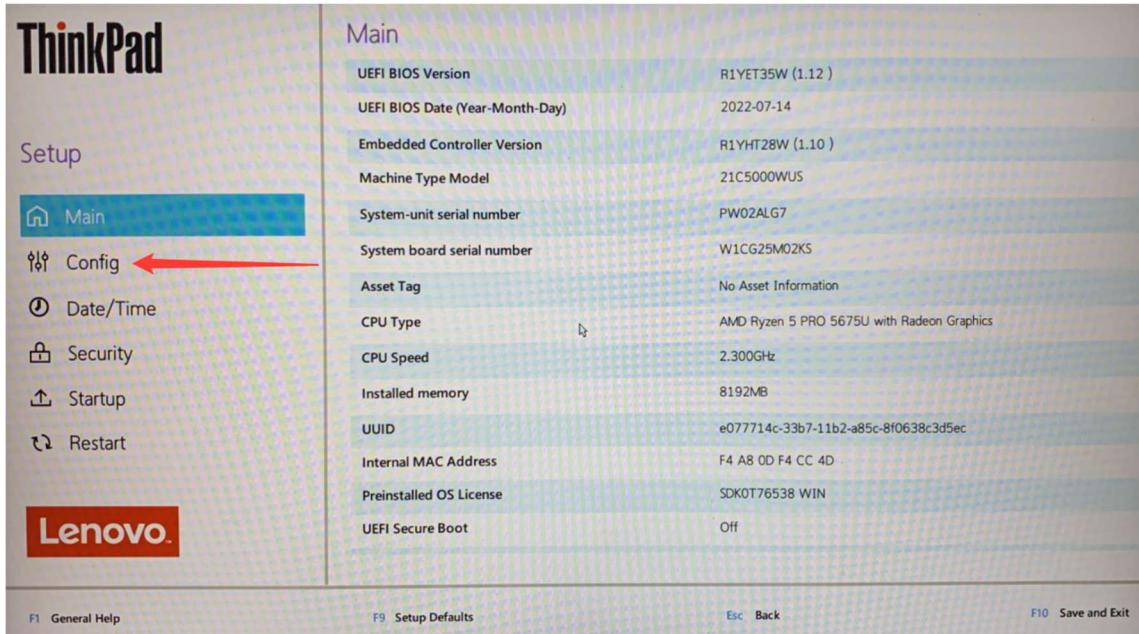


06. Click "Network"

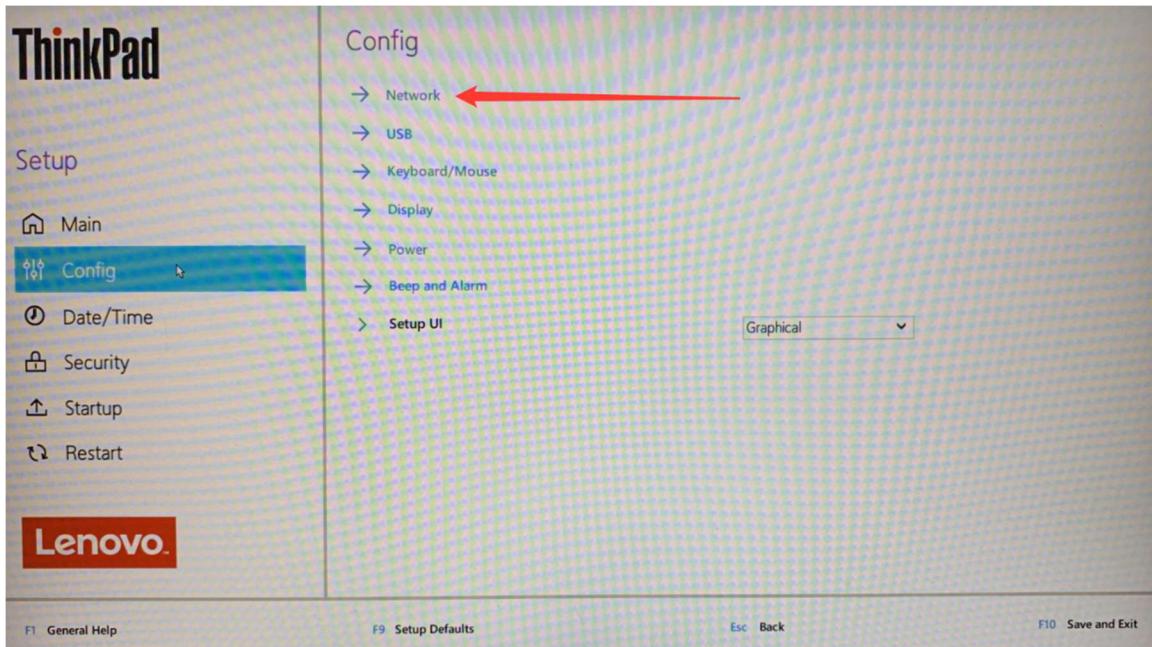

07. if using a device that has an **onboard hardwired NIC**, set "MAC Address Passthrough" to "internal mac address"

08. if using a device that has an **onboard wireless NIC**, set "MAC Address Passthrough" to "second mac address"

09. Click "save and Exit"

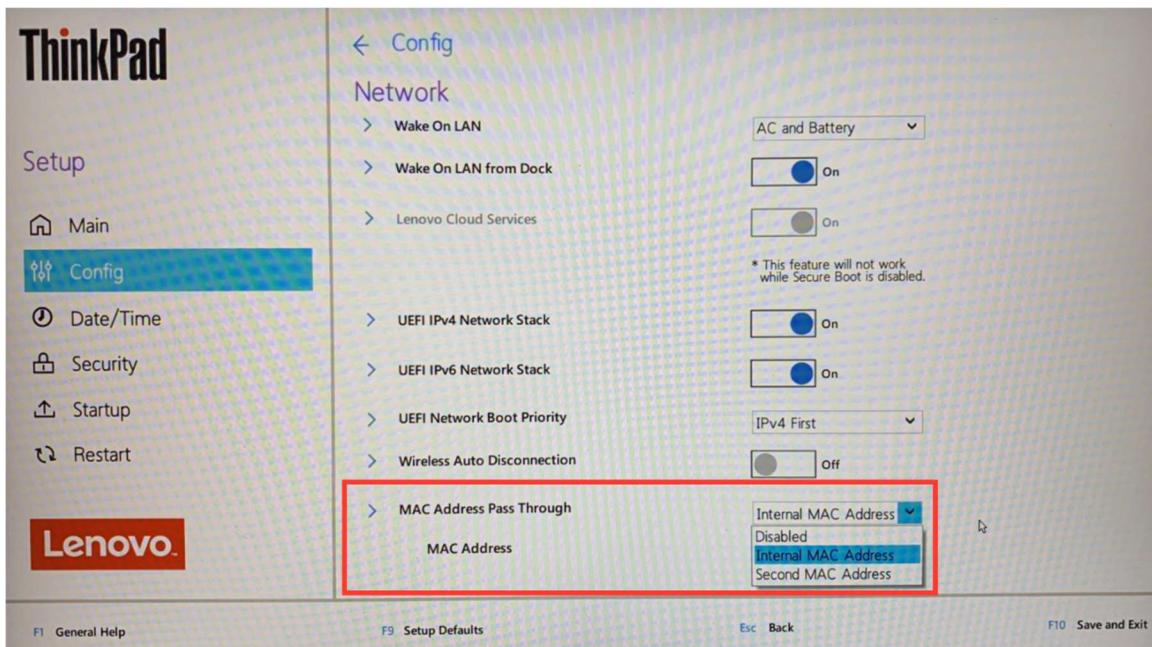

You can now use your [Lenovo USB C docking station](#) to register your Lenovo thin client with LTM properly.

The following link will provide the proper device driver set up for the Lenovo USB C Docking Station:

<https://pcsupport.lenovo.com/pa/th/downloads/ds501902>