

Installing Ithaca Printer 280 and PrinterPreferences

The following are instructions on how to install to install Ithaca Printer 280 Instructions


Prep: Get Rick to bring the Ithaca Printer, Power Supply, and Printer Cable to PC

Installing Ithaca Printer Driver

- 1) Login as admin on the users PC
- 2) Power on the Printer and Plug it into the PC
- 3) Go to <http://www.transact-tech.com/drivers/ithaca-280>
- 4) Click on the download button in the Windows Drivers Category
- 5) Once the zip file is downloaded, create a folder in the C: Drive called Ithaca Drivers
- 6) Right click on the zip file and Extract All to the Itacha Drivers folder
- 7) Go the Devices and Printers category and Click on the Add a printer
- 8) Click on the Add a printer
- 9) Choose option to Add a Local Printer
- 10) Under choose a printer port choose USB001orUSB002 and click Next
- 11) Click on the button Have Disk
- 12) On the Install from Disk screen click on the browse button
- 13) Go to the C: Drive and choose Ithaca Drivers folder and choose the ITherm-576 folder, the Therm-576.inf file then click on the OK.
- 14) Under the Install the printer driver choose ITherm280 driver and click Next
- 15) Under the printer name choose Next and the printer will be installed.

Printer Preferences

- 1) Have the user login and select Devices and Printers
- 2) Go to the Ithaca 280 Printer and select Printer Properties
- 3) Under the Ports Section make sure the USB00# is checked with Enable bidirectional support

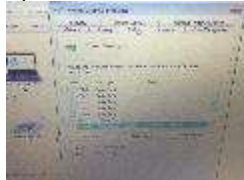

IMG_0104.JPG

- 4) Under the the Advanced make sure Always available is checked, Spool print documents so program finishes printing faster, Print spooled documents first, and enable advanced printing features



IMG_0105.JPG

- 5) Under Device Settings: Receipt: Receipt (576 Pixels). Eject PAGE with FF?: No



IMG_0106.JPG

- 6) Under the Transact Printer Properties
- a) Skip 1st Page Commands: YES
 - b) EndDoc Line Feeds: [ESC]d# 5
 - c) EOD Knife Cut: [ESC]v YES
 - d) Fire Cash Drawer1: [ESC]x<1> YES
 - e) Choose Set as New Default Button



IMG_0107.JPG